

Optimum

600 3RD GENERATION COLD PRESS JUICER



USER MANUAL

CONTENTS

WELCOME TO YOUR NEW KITCHEN ASSISTANT	1
SAFETY FIRST	1
GETTING TO KNOW YOUR 600 3RD GEN. COLD PRESS JUICER	3
ASSEMBLY METHOD NO. 1	5
ASSEMBLY METHOD NO. 2	6
USING YOUR OPTIMUM 600 3RD GEN. COLD PRESS JUICER	8
CLEANING AND MAINTENANCE	9
TROUBLESHOOTING	11
PRODUCT SPECIFICATIONS	11
WARRANTY TERMS & CONDITIONS (INTERNATIONAL)	12
CONTACT US	13

WELCOME TO YOUR NEW KITCHEN ASSISTANT

Congratulations on purchasing your professional quality Optimum 600 3rd Generation Cold Press Juicer. The 600 3rd Gen. Cold Press Juicer can be used to create your favourite juices, smoothies, and purées using fruits and vegetables.

TO ENSURE YOUR SAFETY AND TO GET THE BEST PERFORMANCE FROM YOUR OPTIMUM 600 3RD GEN. COLD PRESS JUICER, PLEASE READ THESE INSTRUCTIONS CAREFULLY.

SAFETY FIRST



WHEN USING ELECTRICAL APPLIANCES, YOU SHOULD ALWAYS BE AWARE OF AND FOLLOW BASIC SAFETY PRECAUTIONS INCLUDING:

 
 
 
 
 
 
 
1. Read and follow all instructions and warnings in this manual carefully.
2. To protect against the risk of injury due to electric shock, do not immerse the 600 3rd Gen. Cold Press Juicer in water or any other liquid.
3. Only connect the appliance to a grounded power outlet. Always make sure the power plug is inserted into the power outlet properly.
4. The input voltage of this appliance is between 220-240V, at 50-60Hz. Ensure the power source is compatible with the appliance before connecting it to avoid damage.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
6. Do not operate the juicer if the power cord or plug are damaged, or if it malfunctions or is damaged in any way. Return the appliance to the nearest authorised service facility for inspection or repair. Do not attempt to repair the appliance yourself to avoid the risk of injury.
7. Do not operate the appliance with wet hands.
8. If you have any issues operating the juicer, first refer to the Troubleshooting section. If the problems persist, contact and return the appliance to distributor for inspection or repair. Do not disassemble the juicer yourself.
9. Unplug the power cord from the power outlet before assembling, disassembling, cleaning or putting your hands near any moving parts of the appliance to avoid injury.
10. Ensure the detachable parts of the appliance are installed properly before use. The pulp extractor and feeding chute should be in the 'lock' position to prevent leakage, spillage, or parts from becoming loose during juicing.
11. Place the appliance on a flat, stable and level surface, away from any water or heat sources. Do not use the appliance on carpets, towels, plastic, paper, or flammable surfaces.

SAFETY FIRST


12. The appliance is equipped with an intelligent protection chip, which automatically switches off the appliance after 20 minutes of juicing. To increase the lifespan of the appliance, always allow 20–30 minutes for the motor to cool down between uses.
13. If the appliance is overloaded or blocked during juicing, it will stop automatically after a few seconds. You can restart the appliance after hearing the ‘beep’ sound. If the blockage still remains, unplug the juicer and remove any food debris or pulp and restart the appliance.
14. Do not squeeze lemon juice directly into the appliance.
15. Always ensure the appliance conforms to food safety and hygiene standards by following the cleaning and maintenance instructions in this manual.
16. The juicing screw is made of ceramic and can be broken easily. Handle the juicing screw with care to prevent it from slipping or falling.
17. Use water to clean the appliance and all detachable parts, which come into direct contact with the ingredients, after every use. Do not use abrasive materials, harsh cleansers or corrosive liquids (e.g. acids, acetone, etc.) to clean the appliance.
18. Exercise extra care when handling parts of the appliance with sharp edges, emptying the cups of their contents, and during the cleaning of the appliance.
19. Switch off and unplug the appliance during long periods of inactivity.
20. Never use anything but the tamper to push ingredients into the juicer.
21. Never use any objects (e.g. chopsticks) to remove blockages in the outlets. Follow proper cleaning procedures instead.
22. The appliance is intended to be used in household and similar applications such as:
 - ▶ staff kitchen areas in shops, offices and working environments;
 - ▶ farm houses;
 - ▶ by clients in hotels, motels and other residential type environments;
 - ▶ bed and breakfast type environments.

**FAILURE TO FOLLOW SAFETY INSTRUCTIONS AND WARNINGS COULD
RESULT IN SERIOUS INJURY. MISUSE OF YOUR COLD PRESS
JUICER MAY DAMAGE YOUR APPLIANCE AND VOID YOUR
WARRANTY.**


GETTING TO KNOW YOUR 600 3RD GEN. COLD PRESS JUICER

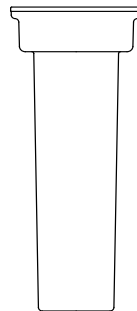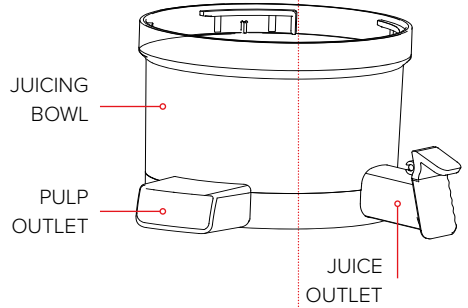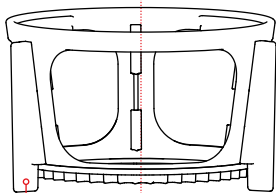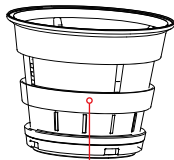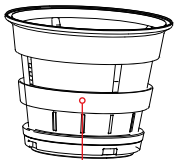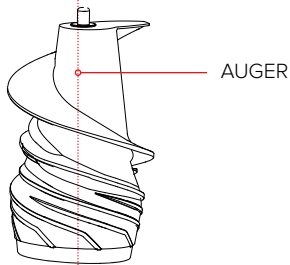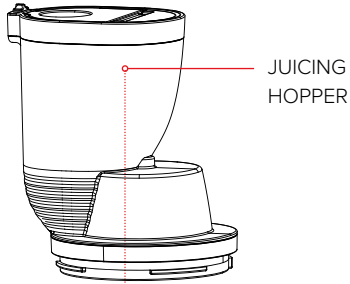

4 // OPTIMUM 600 3RD GENERATION

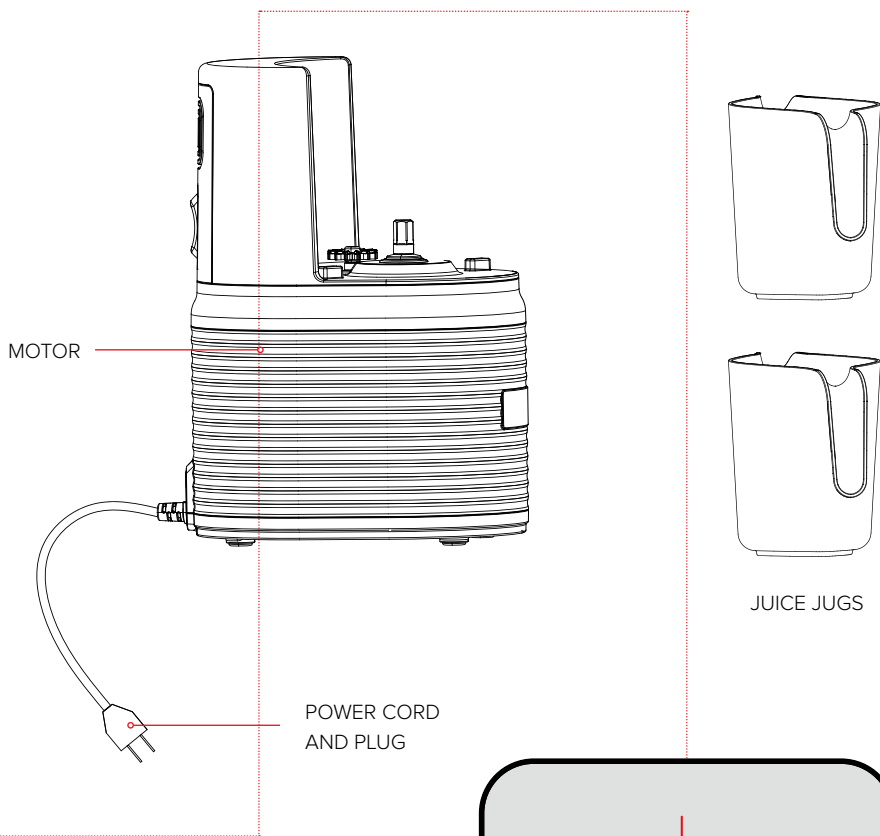 


 CAUTION: The appliance will work only when the power plug is connected and the lid assembly is properly put together, as shown.

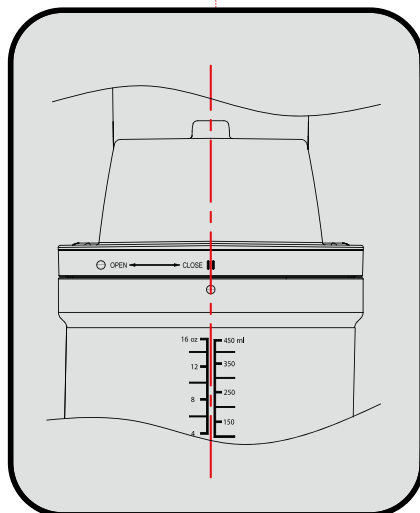


ASSEMBLY METHOD NO. 1

 1.

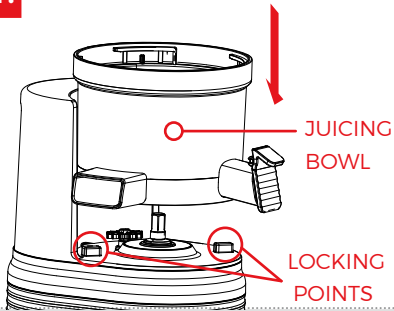


Install the chamber onto the main body, by aligning it to match the two locking points.

 2.

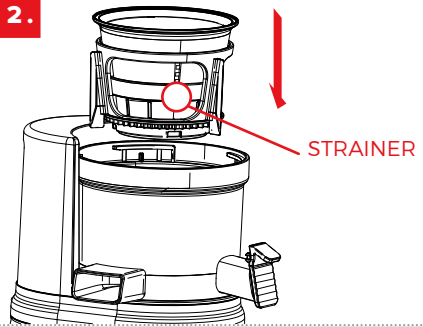


Install the strainer inside the chamber.

 3.

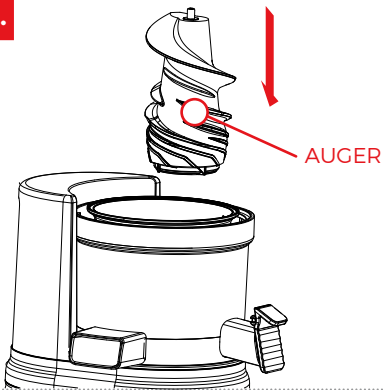


Install the auger into the middle of the strainer.

 4.

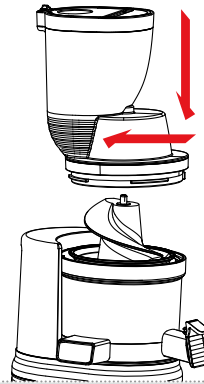**To install lid assembly:**


A. Align the the reference mark on the lid with the matching mark on the main housing, as shown in the illustration, .

 B. Turn the lid assembly clockwise.

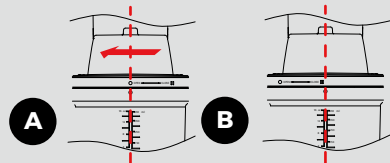


ASSEMBLY METHOD NO. 2

 1.

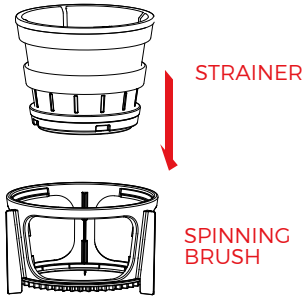


Install the stainer into the spinning brush.

 2.

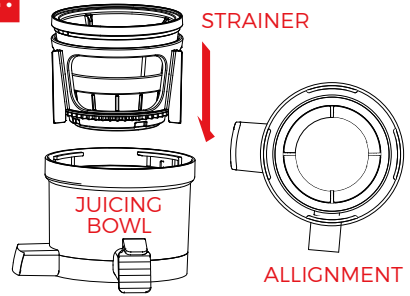


To assemble the stainer into the juicing bowl, align any of the four (4) ribs of the stainer with the juicing bowl lock .

 3.

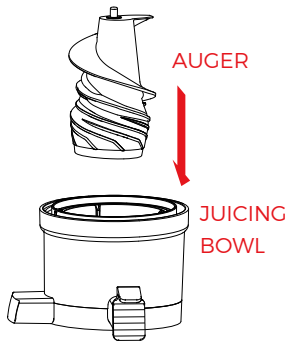


Align the auger with the middle of the chamber, then push it down in the proper position.

 4.

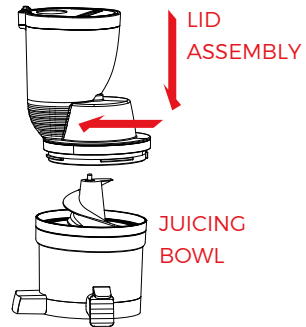


To install the lid assembly, place the lid onto the chamber and then turn the assembly counter-clockwise until it locks in place.

 5.

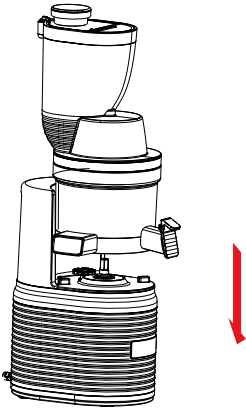

Install the juicing bowl onto the main body by aligning it to match the two locking points

 6.

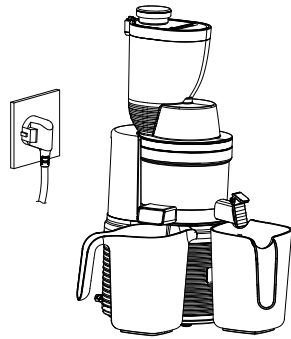

PULP JUG

JUICE JUG

PREPARING FOR USE

 
1. Plug the appliance to a power outlet.
2. Place the identical juice and pulp jars as indicated in the illustration.

7.

BOTTOM VIEW OF JUICING BOWL

INSERTION DIRECTION

INSERT FIRMLY

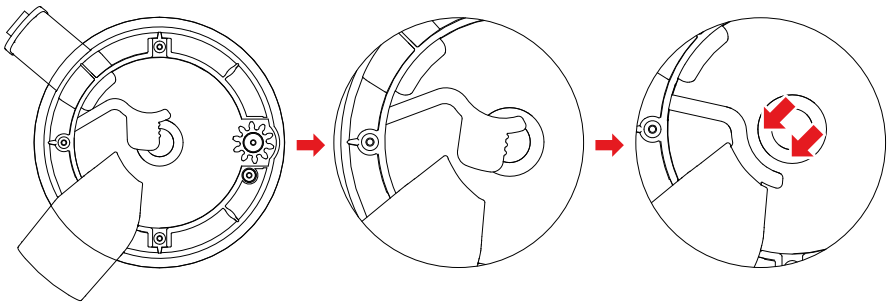


ASSEMBLING THE JUICING RUBBER MAT

When cleaning, pull out the juicing rubber mat, and put back as shown in the figure.

USING YOUR OPTIMUM 600 3RD GEN. COLD PRESS JUICER

 
1.

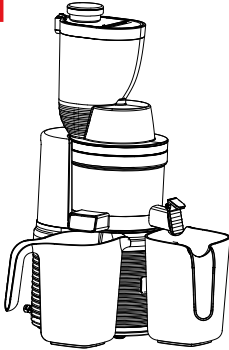

BUTTON



 PRESS



1. Press Power button (◀)

 
◀ : Press the left-hand arrow to feed ingredients into the juicer:

▶ : Press the right-hand arrow to bring the ingredients back up.

WARNING:

Do not operate the machine with wet hands.


2.

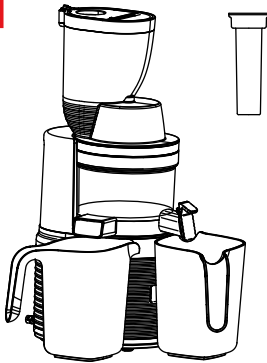


2. Place clean ingredients into the chute, and push them down using the tamper. Juice extracting (with strainer assembly)

1. Use fresh ingredients.
2. Cut carrots into small cubes before juicing.
3. Remove the pit from persimmons, plums, peaches and other stone fruits, before juicing.
4. To avoid damaging the strainer, do not overload it.

 3.

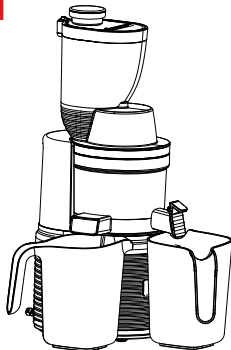

BUTTON

 


3. Making smoothies with the smoothie strainer.

Peel and core fruits, then pre-cut them to a size that will fit into the chute. Place the cut ingredients into the freezer; when they are frozen, they can be used to make smoothies.

NOTE: Smoothies come out of the pulp outlet, not the juice outlet.

USING YOUR OPTIMUM 600 3RD GEN. COLD PRESS JUICER

 4.

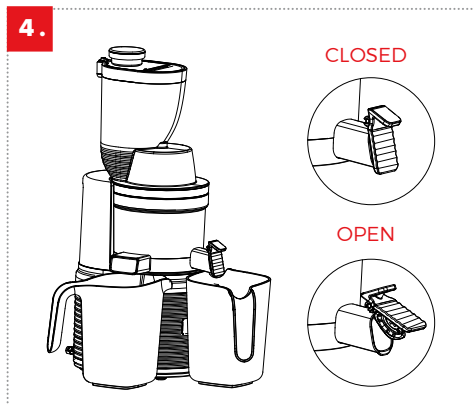

4. Using the juice outlet

Collecting juice:

When juicing, you can open the outlet to collect juice directly into the jar.

Mixing:

If you are juicing several ingredients at once, leaving the outlet closed ensures better mixing results.

NOTE: When juicing, do not exceed the max level mark.

CLEANING AND MAINTENANCE

ALWAYS TURN OFF AND UNPLUG THE JUICER BEFORE DISASSEMBLING AND CLEANING IT.

METHOD 1:


Press the reverse button once then, grasp the lid assembly and pull up as shown in the illustration.

METHOD 2:

Turn the lid anti-clockwise until the open mark aligns with the ●. Pull off the lid then, pull the chamber from the main body.


CLEANING AND MAINTENANCE

 1.

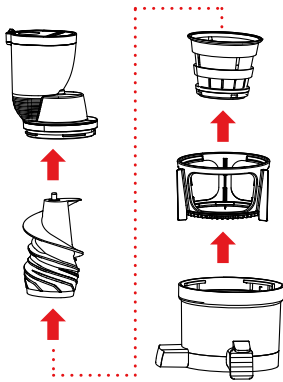


Disassemble the parts in the order shown in the illustration.

 2.

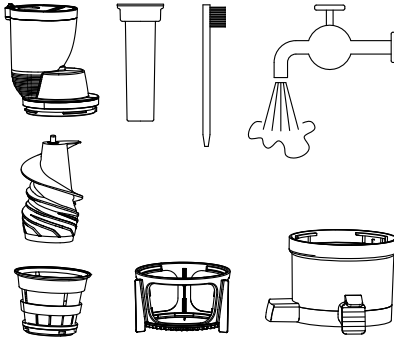

Rinse the detachable parts with water. If the strainer is blocked, use the cleaning brush to remove food debris. When cleaning, do not use steel brushes, sharp tools, or cleaning products.

 3.

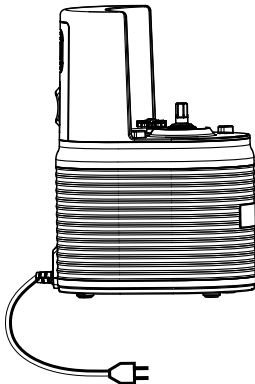

If the main body becomes dirty, wipe it with a damp cloth but do not immerse in water.

Wipe the cleaned juicer with a soft, dry cloth before storing.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
It's not working!	The appliance is not plugged in.	Ensure the 600 3rd Gen. Cold Press Juicer is plugged into a grounded power outlet.
	You have not pressed the power button.	Press the power button and the appropriate arrow.
The juicer has discoloured parts.	It is normal for the juicing screw, juice strainer, feeding chute, juice cup and other parts of the appliance to be stained by certain ingredients.	This discolouration does not compromise the safety of using the appliance and does not pose any harm to your health.
The juicer has stopped working.	The appliance is equipped with an intelligent protection chip, which automatically switches off the appliance after 20 minutes of juicing.	Wait 20-30 minutes for the motor to cool down and start again.
	The appliance is overloaded or blocked.	Restart the appliance after hearing the 'beep' sound. If the blockage still remains, unplug the juicer and remove any food debris or pulp and restart the appliance.

PRODUCT SPECIFICATIONS

1	Product	Optimum 600 3rd Generation Cold Press Juicer
2	Rated Voltage	220-240V
3	Rated Power	200W
4	Rated Frequency	50/60Hz



Only for EU countries. Do not dispose of electric appliances together with household waste material! In observance of European Directive 2002/96/EC on waste electrical and electronic equipment and its implantation in accordance with national law, electric appliances that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

WARRANTY TERMS & CONDITIONS (INTERNATIONAL)

This warranty as outlined below solely covers distributors of the Optimum range of products. Please contact your distributor for full product warranty.

Effective as of 1st January 2014

1. Optimum® warranties this product against defects in materials and workmanship for a period of 2 years from the original date of purchase when used in accordance with the accompanying instruction manual.
2. Any warranties exceeding this standard period are offered as extended terms by the selling distributor and claimable only through that provider.
3. Defects that occur within this manufacturer's warranty period, under normal use and care will be repaired or replaced at our discretion only if the selling distributor is unable to do so. This is done solely at our option with no charge for parts. This warranty does not extend to accessories included or purchased separately. Replacements can be offered for major faults as determined by your distributor and at their own discretion.
4. In the event that the goods requiring repair are under warranty, and this distributor is unable to provide the repairs; the customer is responsible for any freight charges to or from Optimum® (or their approved service provider).
5. Whilst in transit the goods are at the owner's risk and any further damage during this transportation is not covered under warranty.
6. Customers should ensure that the product being returned is properly packaged so as to ensure that no damage occurs to the product during transit. To be able to process the warranty claim ensure you have included an explanation of any problem, Optimum® will not fault-find and will only repair described faults as covered under warranty.
7. This full warranty is void if this product has been subject to abuse, negligence, accident, alteration, failure to follow operating instructions, or the product has been exposed to abnormal or extreme conditions.
8. Cosmetic changes that do not affect performance, such as discolouration of parts of the product in the hands of the user or the effects of the use of abrasive cleaners will not be warranted or considered defects. The cleaning or removal of food products along with any damage caused by allowing them to build up is not covered by this full warranty.
9. This warranty does not cover normal wear and tear of the product or parts.
10. This warranty does not cover any defect caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized medication, loss of parts, tampering or attempted repair by a person not authorized by Optimum®.
11. The warranty will not apply if damage, malfunction or failure resulting from alterations, accident, misuse, abuse, fire, liquid spillage, maladjustment of customer controls, use on an incorrect voltage, power surges and dips, thunderstorm activity, acts of God, voltage supply problems, tampering or unauthorized repairs by any persons, use of defective or incompatible accessories, exposure to abnormally corrosive conditions or entry by any insect, vermin or foreign object in the product.
12. This warranty does not cover damage resulting from the use of an alternate power source (e.g. solar, inverter, generator) and the use of these devices to power your appliance is not recommended.

13. You must keep your purchase receipt as proof of purchase and as proof of the date on which the purchase was made. The purchase receipt must be presented when making a claim under this warranty.
14. In the event the receipt of purchase is not presented, then this warranty is invalid. Consumer Law allows us to request reasonable proof of purchase to service a warranty claim.
15. This warranty does not imply, intend to or detract from any consumer rights listed in and able to be enforced from Regulated Consumer Law, any condition which is found to be in breach of the consumer law, the single condition shall be void only and all other conditions remain in place.

CONTACT US

Please contact the distributor located in the country where you made your original purchase for all Support, Servicing and Warranty.

